TA-F670ES

SERVICE MANUAL

AEP Model
UK Model

SPECIFICATIONS

Amplifier Section

Items	Condition		Data
			TA-F670ES
Continuous RMS power output (both channels driven simultaneously)	4 ohm, 20 Hz - 20 kHz	Countries other than North European countries	130 W + 130 W (THD 0.01%) (DIN: 180 W + 180 W)
	6 ohms, 20 Hz - 20 kHz	North European countries	100 W + 100 W (THD 0.006%) (DIN: 120 W + 120 W)
	8 ohms, 20 Hz - 20 kHz	Countries other than North European countries	100 W + 100 W (THD 0.004%) (DIN:120 W + 120 W)
		North European countries	85 W + 85 W (THD 0.004%) (DIN:105 W + 105 W)
Power band width (IHF)	8 ohms, THD 0.02%		10 Hz – 100 kHz at 45 W
Dynamic headroom ('78 IHF)	4 ohms		2 dB
	8 ohms		1.2 dB
Total harmonic distortion	8 ohms, at 10 watt output		0.004%
Intermodulation (IM) distortion 60 Hz : 7 kHz = 4 : 1	4 ohms, at rated output		0.008%
	6 ohms, at rated output		0.006%
	8 ohms, at rated output		0.004%
Damping factor	8 ohms, at 1 kHz		100
Residual noise	network A, 8 ohms		less than 100 μV
Frequency response	PHONO MM		RIAA equalization curve ±0.2 dB
	TUANER, GD TAPE 1,2,3, DIRECT IN		2 Hz – 200 kHz $^{+0}_{-3}$ dB
Input sensitivity	PHONO	MC	0.17 mV 100 ohms
		MM	2.5 mV, 50 kohms
	TUNER, CD, DIRECT IN, TAPE 1,2,3, ADAPTOR, AUX		150 mV, 20 kohms

Items	Condition		Data
			TA-F670ES
S/N (network) ('78 IHF)	PHONO	MC	77 (0.5 mV)
		MM	95 (5.0 mV)
	TUNER, CD, DIRECT IN, TAPE 1,2,3, ADAPTOR, AUX		105 (150 mV)
Output voltage impedance	REC OUT 1,2,3 ADAPTOR		150 mV, 1 kohm
	HEADPHONES		25 miliwatts (at 8 ohms) Accepts low and high impedance headphones.
Tone controls	BASS, at 100 Hz		±7 dB
	TREBLE, at 10 kHz		±6 dB
Subsonic filter	–		6 dB/octave attenuation below 15 Hz
Muting	–		– 20dB

General

System — Preamplifier section: Low-noise high gain NFB tyte equalizer amplifier, passive type direct tone control
Power amplifier section: Pure-complementary SEPP power amplifier,

Power requirements
UK model: 240V AC, 50 Hz
AEP. G model: 220–230V AC, 50/60 Hz

— continued on next page —

INTEGRATED STEREO AMPLIFIER

SONY®

Power consumption

	TA-F670ES
UK model	700W
North European model	200W
European model	310W

Dimensions Approx. 430×150×375mm (w/h/d) (17×5⁷/₈×14³/₄ inches)

weight Approx. 12.5kg (27 lbs 9 oz) net

Design and specifications subject to change without notice.

Note
This appliance conforms with EEC directive 87/308/EEC regarding interference suppression.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK ⚠ OR DOTTED LINE WITH MARK ⚠ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

MODEL IDENTIFICATION

—Model Number Label—

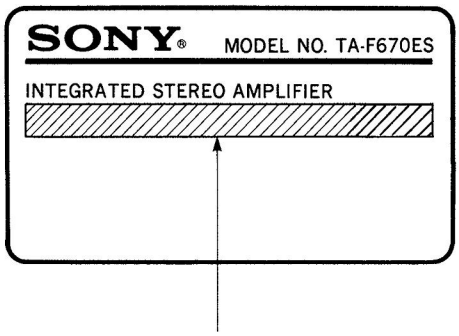

AEP model : AC 220V–230V~50/60Hz
Germany model : AC 230V~50/60Hz
UK model : AC 240V~50/60Hz

Function of Controls

Front panel

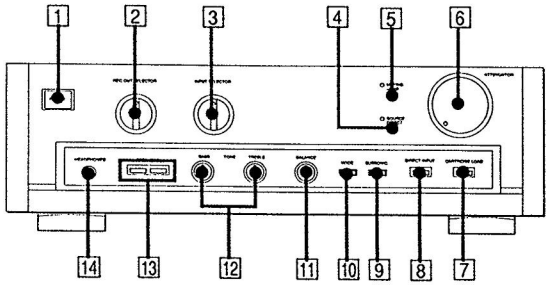

1 POWER switch and indicator
After the power is turned on, the standby indicator lights in red as the built-in muting circuit activates. When the amplifier stays in a stable operating condition, the indicator lights in green.
The indicator lights in red if the unit detects shorting of circuit of the speaker outputs or in case of short-circuit of the inputs of DC components. In such a case, disconnect the power source and check the connected components and speaker systems.

2 REC OUT SELECTOR
Selects the program source sent to the REC OUT jacks for recording.

3 INPUT SELECTOR
Selects the desired program source for listening.

4 SOURCE DIRECT button and indicator
Depress the button. The red indicator lights and the circuits of the TONE control, SUBSONIC filter button, BALANCE control and MODE selector are disengaged without regard to the setting of the switches.

5 MUTING button and indicator
Depress the button to reduce the sound level by 20 dB. (Output voltage becomes 1/10.)
Generally, keep the button released (OFF).

6 ATTENUATOR
Adjusts the sound level. To increase the sound level, turn the control clockwise. To decrease the level, turn the control counterclockwise.

Note
Turn down the sound level before switching on the unit. This prevents damage to speakers.

7 CARTRIDGE LOAD selector
Set the selector according to your cartridge.
MM: For moving-magnet type cartridge
MC: For moving-coil type cartridge

8 DIRECT INPUT selector
Set to SOURCE to select program source with the INPUT SELECTOR.
To listen to a program source processed through the equipment, such as graphic equalizer, connected to the ADAPTOR jacks, set it to SOURCE .
To listen to a program source connected to DIRECT IN jacks, set it to DIRECT.

9 SUBSONIC filter button
Depress the button to reduce noise components of less than 15 Hz, which cause modulation noise.

10 MODE selector
STEREO: For listening to a stereo program.
MONO: For listening to a monaural program.

11 BALANCE control
Adjusts the sound level of left and right speakers.

12 BASS and TREBLE TONE controls
Adjust the tone quality.
To increase bass or treble sound, turn the control clockwise. To decrease them, turn the control counterclockwise.

13 SPEAKERS buttons
Select speaker system A or B, or both.
To drive speaker system A: Depress A button.
To drive speaker system B: Depress B button.
To drive speaker system A and B: Depress A and B.
For headphones listening only: Set both to OFF (⊓).
To use power amplifier or active speaker system connected to the PRE OUT jacks, depress B/PRE OUT.

14 HEADPHONES jack
Accepts the stereo phone plug of headphones.

This section is extracted from instruction manual.

SECTION 2
ELECTRICAL ADJUSTMENTS

Bias Adjustment

Note : Adjust the idling after tuning the unit on for about 10 minutes, giving it time to warm up.

Procedure :

1. Connect the digital voltmeter to VH5 on main board as follows.
2. Adjust RT301 (L-CL) and RT351 (R-CH) so that the digital voltmeter on signal reads 14mV at VH5.

Adjustment Location :

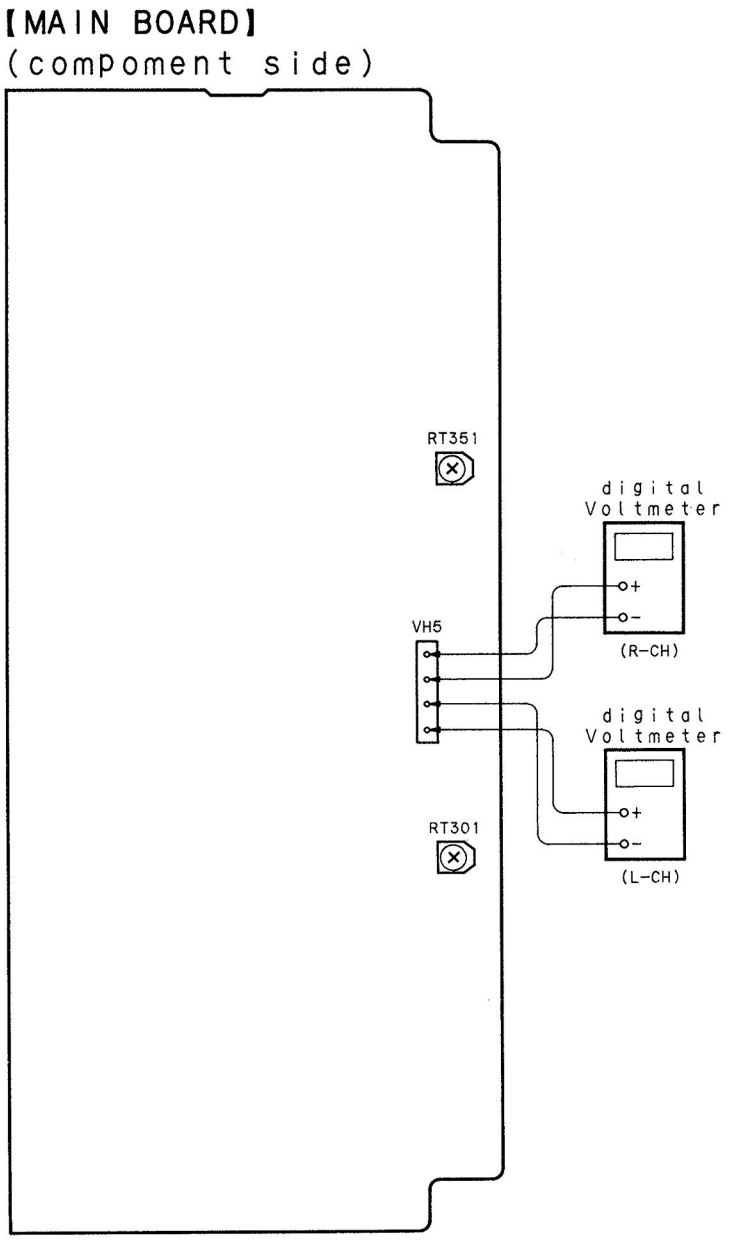

SECTION 3
DIAGRAMS

3-1. CIRCUIT BOARDS LOCATION

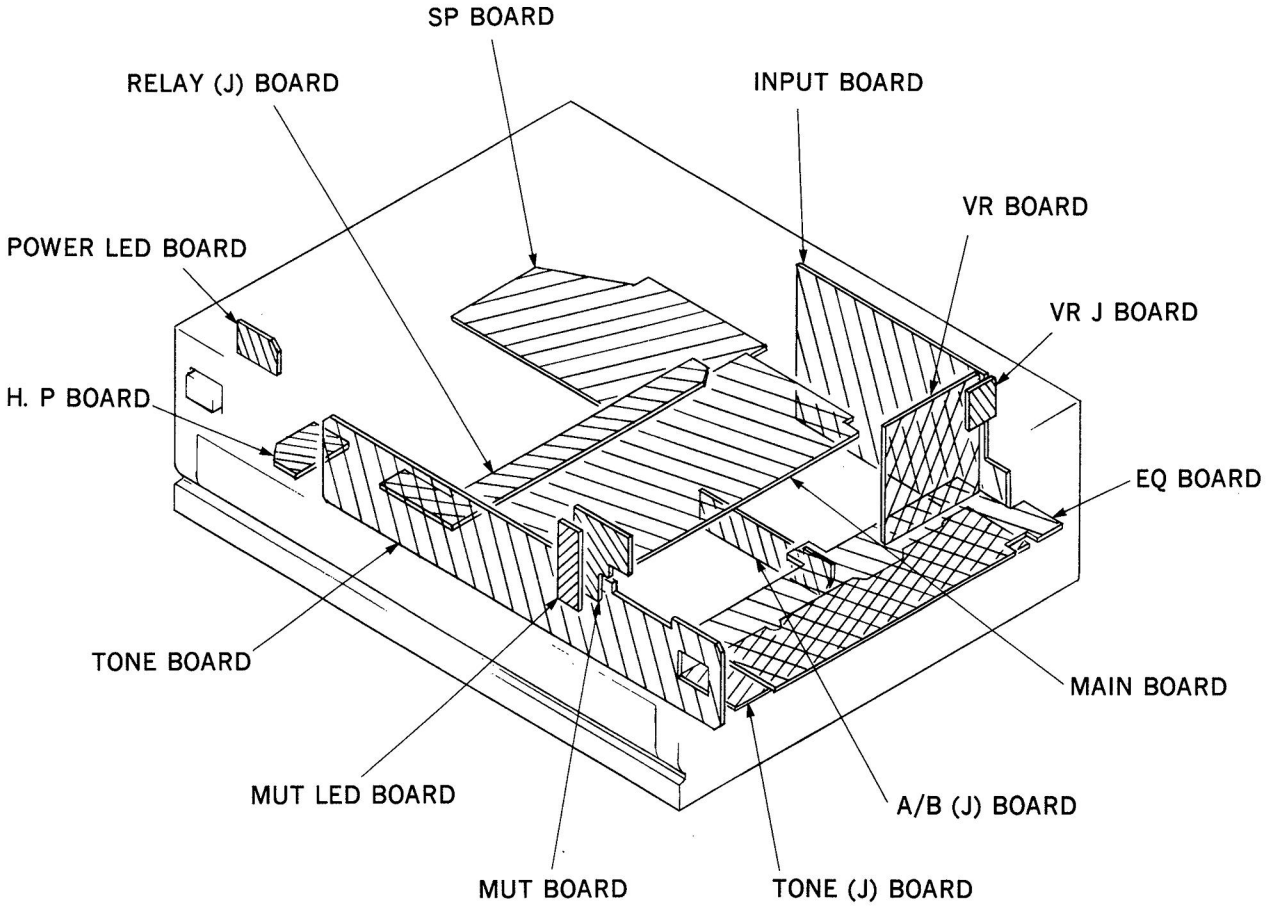

3-2. SEMICONDUCTOR LEAD LAYOUTS

RC4560DD

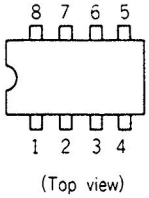

TA7815S



TA-7915S

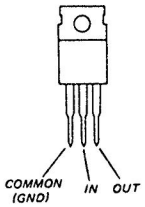

μPC1237HA



2SA733-QP
2SC945-P



2SA985A-QP
2SC2275A-P



2SA988-PAFAEA
2SA1371-E
2SC2545-E



2SA1216M-0Y
2SC2922M-0Y



2SC1941-LK
2SD774-34



2SC2259-FG



2SC2603-EF



2SC3423-0



2SK246-GR2



HZS6C3L
UZL-7M1
1SS120
11ES2

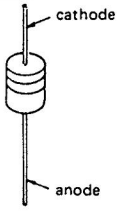

30DF2

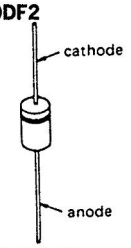

SEL1516W
SEL2810A

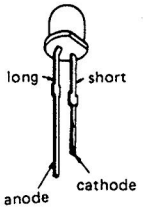

• Semiconductor Location

Location	Ref. No.	Location	Ref. No.
D301	H-19	Q302	G-19
D302	H-19	Q303	G-19
D303	H-19	Q304	H-18
D304	G-20	Q305	H-19
D305	G-20	Q306	H-19
D306	G-19	Q307	H-19
D307	I-22	Q308	H-20
D308	I-23	Q309	H-22
D309	J-23	Q310	H-23
D351	I-19	Q311	H-23
D352	I-19	Q312	I-22
D353	I-19	Q313	G-22
D354	J-20	Q314	J-23
D355	J-20	Q351	J-18
D356	J-19	Q352	J-19
D357	C-22	Q353	J-19
D358	C-23	Q354	I-18
D359	C-23	Q355	J-19
D401	F-19	Q356	J-19
D501	E-25	Q357	J-19
D502	E-25	Q358	I-20
D503	G-25	Q359	D-22
D504	G-25	Q360	D-23
D505	D-25	Q361	D-23
D506	E-25	Q362	C-22
D507	H-25	Q363	E-22
D508	H-26	Q364	B-23
D509	H-25	Q401	D-18
D510	H-25	Q402	D-18
D511	I-25	Q451	D-19
D512	F-3	Q452	D-19
D513	I-2	Q501	I-4
D514	I-2	Q502	I-3
D515	F-29	Q503	I-3
D516	F-30	Q504	I-2
D517	F-2	Q505	K-11
D518	H-5	Q506	K-12
D519	G-5		
D520	C-11		
D521	C-7		
IC401	E-19		
IC402	E-20		
IC403	F-20		
IC501	J-25		
Q301	G-18		

TA-F670ES TA-F670ES

3-3. PRINTED WIRING BOARDS ✽Refer to page 6 for Semiconductor Lead Layouts and Semiconductor Location.

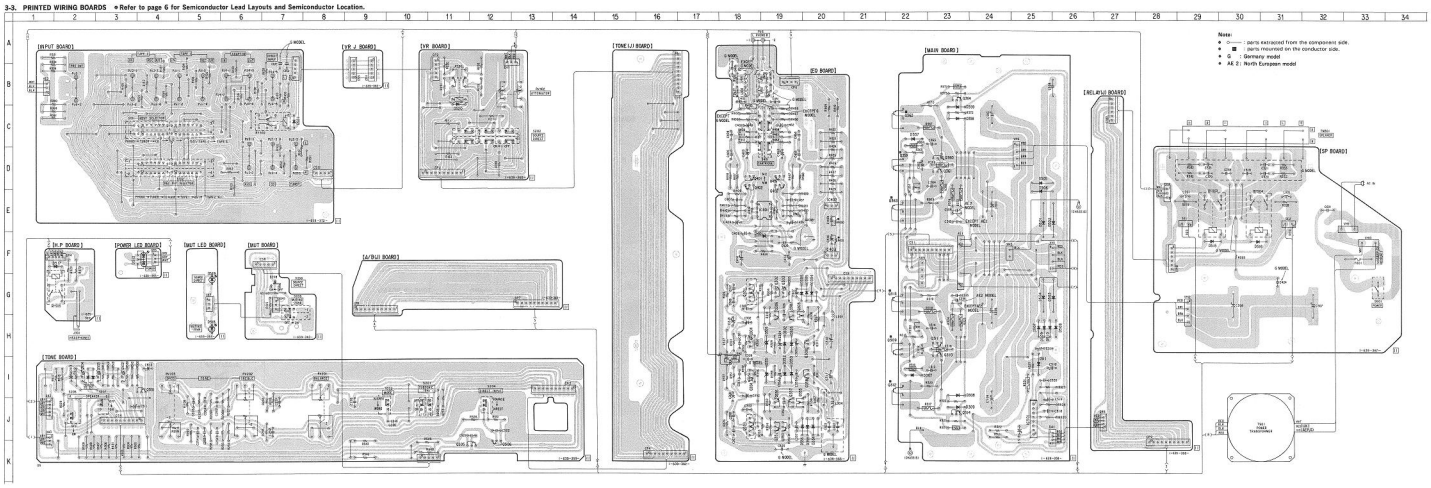

3-4. SCHEMATIC DIAGRAM

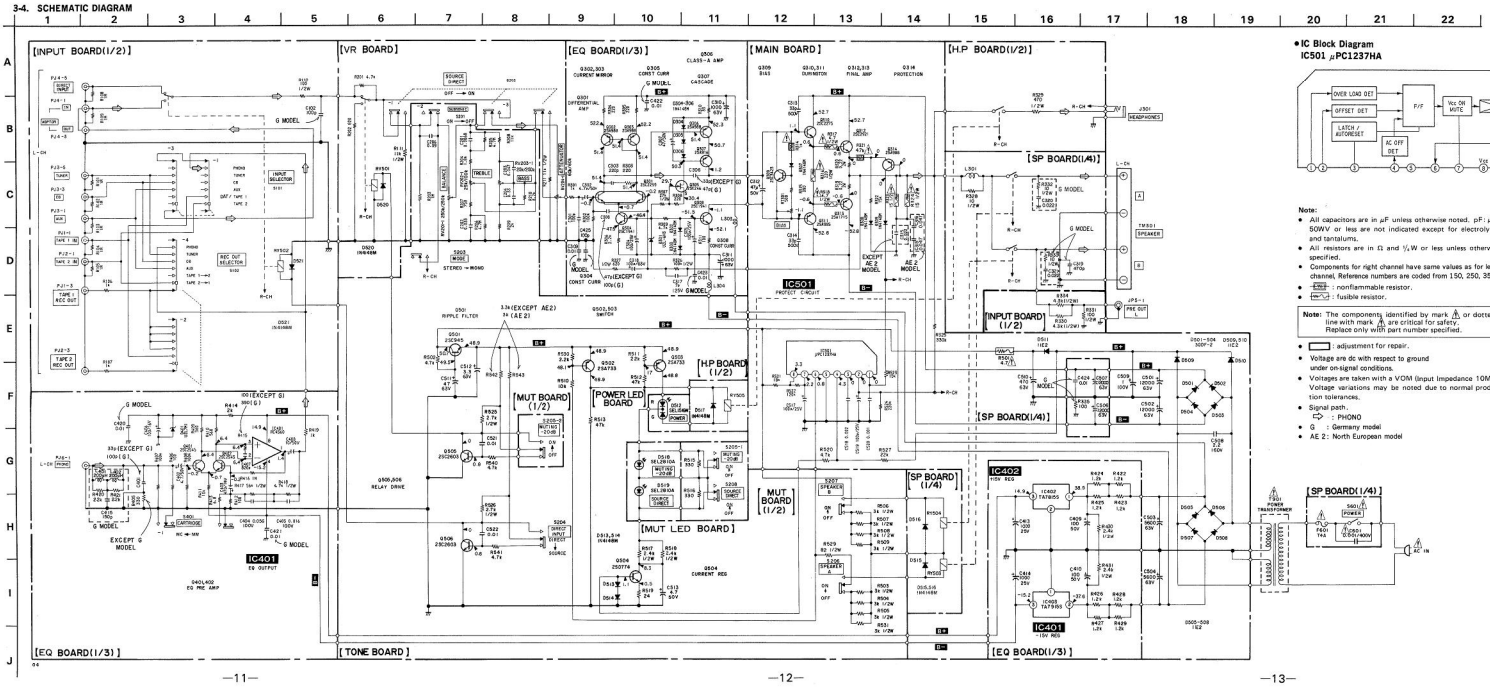

•IC Block Diagram
IC501 μPC1237HA



Note:

- All capacitors are in μF unless otherwise noted. pF: μμF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4W or less unless otherwise specified.
- Components for right channel have same values as for left channel. Reference numbers are coded from 150, 250, 350 ,450.
- ⚠ : nonflammable resistor.
- ⚠ : fusible resistor.

Note: The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

- ▭ : adjustment for repair.
- Voltage are dc with respect to ground under on-signal conditions.
- Voltages are taken with a VOM (input impedance 10M Ω). Voltage variations may be noted due to normal production tolerances.
- Signal path.
  ⇨ : PHONO
- G : Germany model
- AE 2: North European model

SECTION 4
EXPLODED VIEWS

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Color Indication of Appearance Parts
  Example:
  KNOB, BALANCE (WHITE)...(RED)
  ↑ Parts Color ↑ Cabinet's Color
- Hardware(# mark) list is given in the last of this parts list.

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

- G : Germany model
- AE 2: North European model

1. CABINET

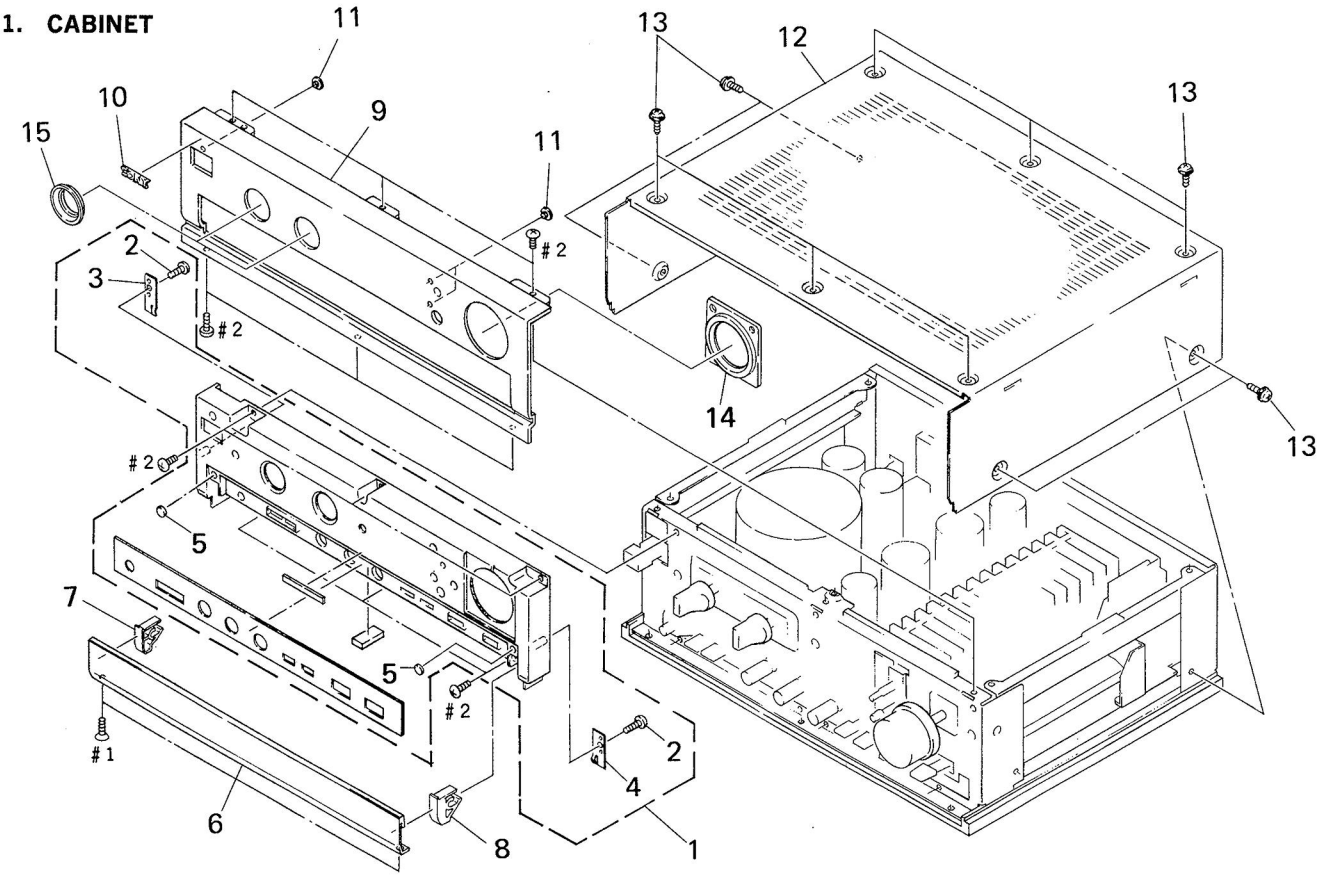

Ref. No.	Part No.	Description	Remark
1	X-4941-784-1	PANEL (BASE) ASSY	
2	4-928-635-01	SCREW, +BV (2.6X8) TAPPING	
3	* 4-942-233-01	SPRING (L), PLATE	
4	* 4-942-234-01	SPRING (R), PLATE	
5	4-879-274-01	SPACER	
6	4-946-346-01	LID	
7	4-942-225-01	ARM (L)	
8	4-942-226-01	ARM (R)	
9	4-946-348-31	PANEL, FRONT (AEP, G)	
9	4-946-348-41	PANEL, FRONT (UK)	
10	4-908-848-01	EMBLEM, SONY	
11	4-931-646-01	LENS, LED	
12	* 4-946-347-01	CASE (AE1, G, UK)	
12	* 4-946-347-11	CASE (AE2)	
13	3-704-366-01	SCREW (CASE) (M3X8)	
14	4-946-324-01	RING (LARGE), ORNAMENTAL	
15	4-946-325-01	RING (SMALL), ORNAMENTAL	

2. SUB CHASSIS

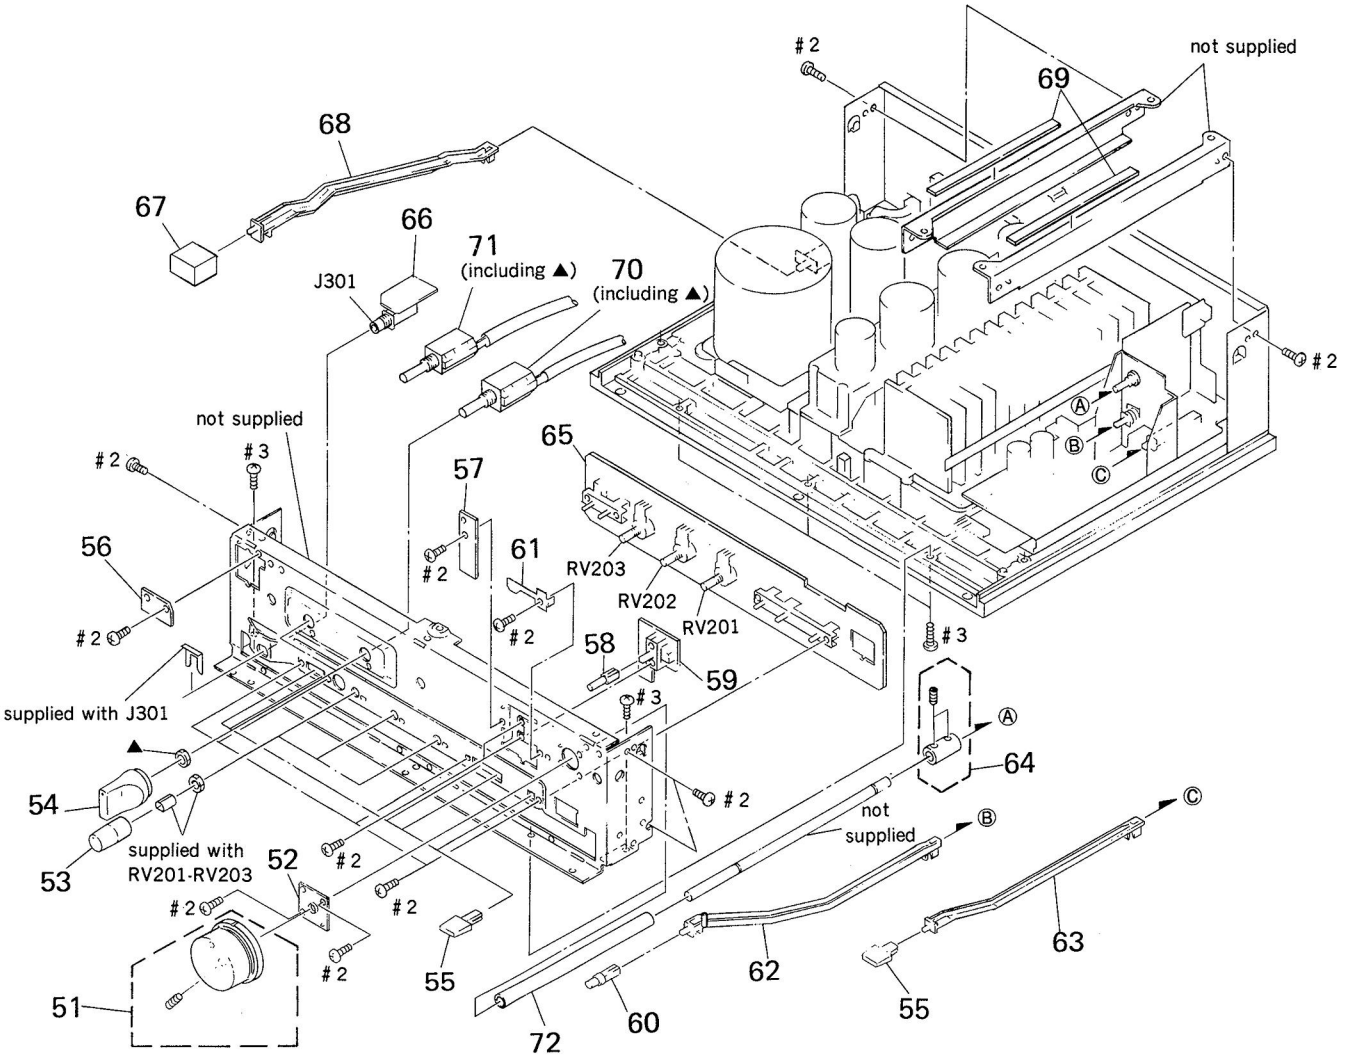

Ref. No.	Part No.	Description	Remark
51	4-946-323-01	KNOB (VOL-L)	
52	4-946-335-01	BRACKET (BEARING)	
53	4-946-333-01	KNOB (TONE)	
54	4-945-601-01	KNOB (F25)	
55	4-942-228-01	KNOB (3X13)	
56	* 1-639-365-11	POWER LED BOARD	
57	* 1-639-364-11	MUT LED BOARD	
58	4-931-641-01	BUTTON (DIA. 4)	
59	* 1-639-363-11	MUT BOARD	
60	4-931-926-01	BUTTON (B)	
61	4-946-732-01	SPRING (S), LEAF	
62	4-946-339-01	ROD (S)	
63	4-946-338-01	ROD (C)	

Ref. No.	Part No.	Description	Remark
64	* 4-946-330-01	JOINT	
65	* 1-639-362-11	TONE (J) BOARD	
66	* 1-639-361-11	H.P BOARD	
67	4-942-032-01	KNOB (POWER)	
68	4-946-340-01	ROD (P)	
69	* 4-916-782-21	DAMPER	
70	1-572-742-11	SWITCH, ROTARY	
71	1-572-743-11	SWITCH, ROTARY	
72	4-946-322-01	SLEEVE	
J301	1-507-796-71	JACK (HEADPHONES)	
RV201	1-241-517-11	RES, VAR, CARBON 250K/250K (BALANCE)	
RV202	1-241-518-11	RES, VAR, CARBON 25K/100K (TREBLE)	
RV203	1-241-519-11	RES, VAR, CARBON 25K/250K (BASS)	

3. MAIN CHASSIS

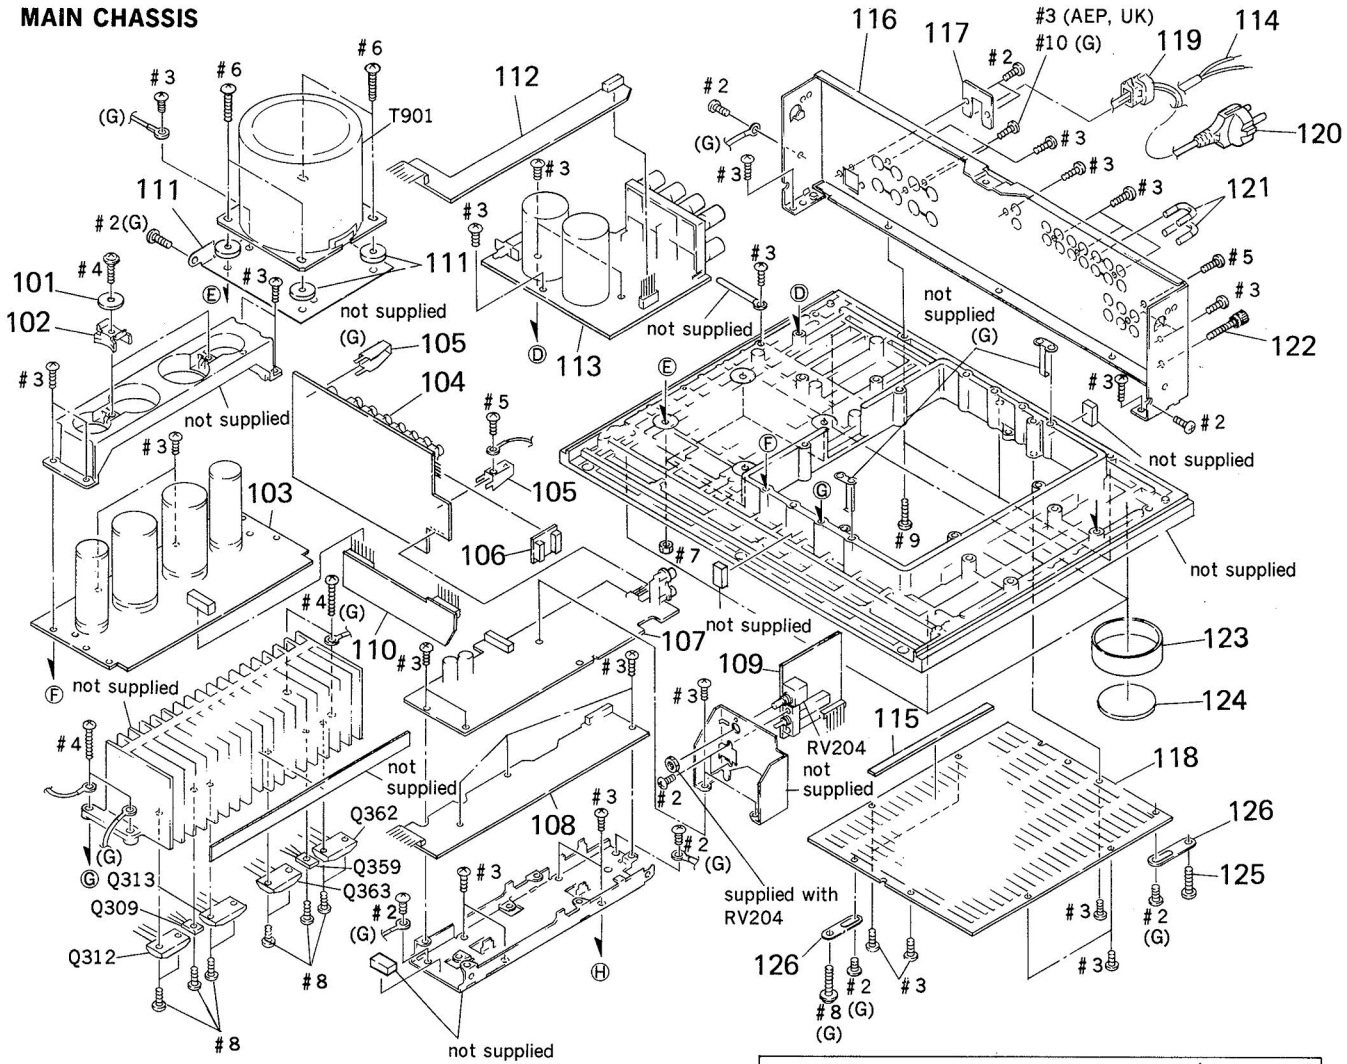
#3 (AEP, UK)
#10 (G)
not supplied
supplied with RV204
RV204
not supplied
not supplied
not supplied

SECTION 5
ELECTRICAL PARTS LIST

EQ | SP | RELAY (J) | A/B (J) | INPUT

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- -XX, -X mean standardized parts, so they may have some differences from the original one.
- CAPACITORS
  uF: μF
- RESISTORS
  All resistors are in ohms
  METAL: Metal-film resistor
  METAL OXIDE: Metal Oxide-film resistor
  F: nonflammable
- COILS
  uH: μH
- SEMICONDUCTORS
  In each case, u: μ, for example:
  uA...: μA..., uPA...: μPA...,
  uPB...: μPB..., uPC...: μPC...,
  uPD...: μPD....

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- G : Germany model
- AE 2: North European model

Ref. No.	Part No.	Description			Remark
	* A-4345-370-A	EQ BOARD, COMPLETE (EXCEPT G)			
	* A-4345-371-A	EQ BOARD, COMPLETE (G)			
		**********			
	* 1-639-367-11	SP BOARD			
		********			
	* 1-639-368-11	RELAY (J) BOARD			
		**********			
	* 1-639-369-11	A/B (J) BOARD			
		**********			
	* 1-639-372-11	INPUT BOARD			
		**********			
	* 1-533-213-31	HOLDER, FUSE			
	* 1-560-242-61	BUS BAR 2P			
	* 4-946-336-01	BRACKET (GROUND)			
		< CAPACITOR >			
C102	1-162-282-31	CERAMIC	100PF	10%	50V (G)
C301	1-104-278-11	POLYSTYRENE	100PF	5%	50V
C302	1-123-369-00	ELECT	4.7uF	20%	50V
C303	1-136-810-11	FILM	220PF	5%	100V
C304	1-124-122-11	ELECT	100uF	20%	50V
C305	1-124-122-11	ELECT	100uF	20%	50V
C306	1-104-272-11	POLYSTYRENE (AEP, UK)	33PF	10%	50V
C306	1-104-274-11	POLYSTYRENE	47PF	10%	50V (G)
C307	1-124-910-11	ELECT	47uF	20%	50V
C308	1-104-274-11	POLYSTYRENE (AEP, UK)	47PF	10%	50V
C308	1-104-278-11	POLYSTYRENE	100PF	5%	50V (G)
C309	1-130-483-00	MYLAR	0.01uF	5%	50V (G)
C310	1-124-922-11	ELECT	1000uF	20%	63V
C311	1-124-922-11	ELECT	1000uF	20%	63V
C317	1-104-326-11	POLYSTYRENE	7PF	1PF	125V
C318	1-124-130-00	ELECT	100uF	20%	63V
C319	1-130-467-00	MYLAR	470PF	5%	50V (G)
C320	1-130-487-00	MYLAR	0.022uF	5%	50V (G)
C321	1-130-487-00	MYLAR	0.022uF	5%	50V (G)
C401	1-136-811-11	FILM (AEP, UK)	330PF	5%	100V
C401	1-110-335-11	MYLAR	100PF	5%	50V (G)
C402	1-123-369-00	ELECT	4.7uF	20%	50V
C403	1-126-103-11	ELECT	470uF	20%	16V
C404	1-130-341-00	FILM	0.056uF	2%	100V
C405	1-130-971-00	FILM	0.016uF	2%	100V
C406	1-124-122-11	ELECT	100uF	20%	50V
C407	1-130-470-00	MYLAR	820PF	5%	50V
C408	1-126-059-11	ELECT	10uF	20%	50V
C409	1-126-052-11	ELECT	100uF	20%	50V
C410	1-126-052-11	ELECT	100uF	20%	50V
C413	1-124-557-11	ELECT	1000uF	20%	25V
C414	1-124-557-11	ELECT	1000uF	20%	25V
C415	1-162-284-31	CERAMIC	150PF	10%	50V (G)
C420	1-161-379-00	CERAMIC	0.01uF	20%	25V (G)
C421	1-161-379-00	CERAMIC	0.01uF	20%	25V (G)
C422	1-106-367-00	MYLAR	0.01uF	5%	200V (G)
C423	1-106-367-00	MYLAR	0.01uF	5%	200V (G)
C424	1-130-483-00	MYLAR	0.01uF	5%	50V (G)
C425	1-162-282-31	CERAMIC	100PF	10%	50V (G)
C506	1-125-695-11	ELECT	12000uF	20%	63V
C507	1-125-695-11	ELECT	12000uF	20%	63V
C601	⚠ 1-161-741-00	CERAMIC	0.001uF	10%	400V
		< CONNECTOR >			
CP3	1-506-906-11	PIN, CONNECTOR 5P			
CP6	1-560-941-00	PIN, CONNECTOR 4P			
CP7	* 1-568-202-11	PIN, CONNECTOR (PC BOARD) 10P			
CP8	* 1-568-202-11	PIN, CONNECTOR (PC BOARD) 10P			

EQ SP RELAY (J) A/B (J) INPUT

Ref. No.	Part No.	Description	Remark
CP9	* 1-568-202-11	PIN, CONNECTOR (PC BOARD) 10P	
CP10	* 1-580-854-11	PIN, CONNECTOR (PC BOARD) 6P	
CS9	* 1-562-334-00	SOCKET, CONNECTOR 10P	
CS10	1-561-115-00	SOCKET, CONNECTOR 6P	
CS12	1-562-087-00	SOCKET, CONNECTOR 4P	
		< DIODE >	
D301	8-719-933-41	DIODE HZS6C3L	
D302	8-719-912-20	DIODE 1SS120	
D303	8-719-912-20	DIODE 1SS120	
D304	8-719-912-20	DIODE 1SS120	
D305	8-719-912-20	DIODE 1SS120	
D306	8-719-912-20	DIODE 1SS120	
D351	8-719-933-41	DIODE HZS6C3L	
D352	8-719-912-20	DIODE 1SS120	
D353	8-719-912-20	DIODE 1SS120	
D354	8-719-912-20	DIODE 1SS120	
D355	8-719-912-20	DIODE 1SS120	
D356	8-719-912-20	DIODE 1SS120	
D401	8-719-000-84	DIODE UZL-7M1	
D515	8-719-912-20	DIODE 1SS120	
D516	8-719-912-20	DIODE 1SS120	
D521	8-719-912-20	DIODE 1SS120	
		< CONNECTOR >	
DR6	* 1-564-338-00	PIN, CONNECTOR 4P	
EH4	* 1-564-506-11	PLUG, CONNECTOR 3P	
		< IC >	
IC401	8-759-981-98	IC RC4560DD	
IC402	8-759-231-59	IC TA7815S	
IC403	8-759-245-87	IC TA7915S	
		< COIL >	
L301	1-428-133-11	COIL, AIR-CORE	
L303	* 1-428-203-11	COIL, AIR-CORE	
L304	* 1-428-203-11	COIL, AIR-CORE	
L351	1-428-133-11	COIL, AIR-CORE	
L401	1-424-397-11	COIL, CHOKE 200uH (G)	
L402	1-424-397-11	COIL, CHOKE 200uH (G)	
L451	1-424-397-11	COIL, CHOKE 200uH (G)	
L452	1-424-397-11	COIL, CHOKE 200uH (G)	
		< PIN JACK >	
PJ1	* 1-573-142-41	JACK, PIN 4P (TAPE1 IN/REC OUT)	
PJ2	* 1-573-142-41	JACK, PIN 4P (TAPE2 IN/REC OUT)	
PJ3	1-568-978-21	JACK 6P (TUNNER, CD, AUX)	
PJ4	1-568-978-21	JACK 6P (DIRECT INPUT, ADAPTOR IN/OUT)	
PJ5	1-573-141-11	JACK 2P (PRE OUT)	
PJ6	1-580-054-11	JACK, PIN 2P (PHONO)	
		< TRANSISTOR >	
Q301	8-729-620-17	TRANSISTOR 2SC2259-FG	
Q302	8-729-140-82	TRANSISTOR 2SA988-PAFAEA	
Q303	8-729-140-82	TRANSISTOR 2SA988-PAFAEA	
Q304	8-729-142-01	TRANSISTOR 2SC1941-LK	
Q305	8-729-201-56	TRANSISTOR 2SK246-GR2	
Q306	8-729-140-82	TRANSISTOR 2SA988-PAFAEA	
Q307	8-729-803-76	TRANSISTOR 2SA1371-E	
Q308	8-729-142-01	TRANSISTOR 2SC1941-LK	
Q351	8-729-620-17	TRANSISTOR 2SC2259-FG	
Q352	8-729-140-82	TRANSISTOR 2SA988-PAFAEA	
Q353	8-729-140-82	TRANSISTOR 2SA988-PAFAEA	
Q354	8-729-142-01	TRANSISTOR 2SC1941-LK	
Q355	8-729-201-56	TRANSISTOR 2SK246-GR2	
Q356	8-729-140-82	TRANSISTOR 2SA988-PAFAEA	
Q357	8-729-803-76	TRANSISTOR 2SA1371-E	
Q358	8-729-142-01	TRANSISTOR 2SC1941-LK	
Q401	8-729-354-52	TRANSISTOR 2SC2545-E	
Q402	8-729-354-52	TRANSISTOR 2SC2545-E	
Q451	8-729-354-52	TRANSISTOR 2SC2545-E	
Q452	8-729-354-52	TRANSISTOR 2SC2545-E	
		< RESISTOR >	
R101	1-246-545-00	CARBON 1.0M 5% 1/4W	
R102	1-246-545-00	CARBON 1.0M 5% 1/4W	
R103	1-246-545-00	CARBON 1.0M 5% 1/4W	
R104	1-246-545-00	CARBON 1.0M 5% 1/4W	
R105	1-246-545-00	CARBON 1.0M 5% 1/4W	
R106	1-247-713-11	CARBON 1K 5% 1/4W	
R107	1-247-713-11	CARBON 1K 5% 1/4W	
R108	1-246-545-00	CARBON 1.0M 5% 1/4W	
R109	1-246-545-00	CARBON 1.0M 5% 1/4W	
R110	1-247-739-11	CARBON 100 5% 1/2W	
R301	1-247-713-11	CARBON 1K 5% 1/4W	
R302	1-249-469-11	CARBON 100K 5% 1/4W	
R303	1-247-704-11	CARBON 220 5% 1/4W	
R304	1-247-704-11	CARBON 220 5% 1/4W	
R305	1-247-704-11	CARBON 220 5% 1/4W	
R306	1-247-717-11	CARBON 2.2K 5% 1/4W	
R307	1-249-490-11	CARBON 27K 5% 1/2W	
R308	1-247-704-11	CARBON 220 5% 1/4W	
R309	1-247-721-11	CARBON 4.7K 5% 1/4W	
R310	1-249-516-11	CARBON 33 5% 1/4W	
R311	1-247-700-11	CARBON 100 5% 1/4W	
R326	1-249-721-11	CARBON 100K 5% 1/2W	
R327	1-249-668-11	CARBON 620 5% 1/2W	
R328	1-247-727-11	CARBON 10 5% 1/2W	

EQ | SP | RELAY (J) | A/B (J) | INPUT

MAIN | TONE | VR | H. P | TONE (J) | MUT | MUT LED | POWER LED | VR J

Ref. No.	Part No.	Description			Remark
R330	1-247-255-00	CARBON	4.3K	5%	1/2W
R331	1-247-739-11	CARBON	100	5%	1/2W
R332	1-247-727-11	CARBON	10	5%	1/2W (G)
R333	1-247-727-11	CARBON	10	5%	1/2W (G)
R334	1-247-255-00	CARBON	4.3K	5%	1/2W
R335	1-247-700-11	CARBON	100	5%	1/4W
R405	1-247-706-11	CARBON	330	5%	1/4W (AEP, UK)
R406	1-247-700-11	CARBON	100	5%	1/4W
R407	1-249-469-11	CARBON	100K	5%	1/4W
R408	1-249-469-11	CARBON	100K	5%	1/4W
R409	1-247-710-11	CARBON	560	5%	1/4W
R410	1-247-710-11	CARBON	560	5%	1/4W
R411	1-247-725-11	CARBON	10K	5%	1/4W
R412	1-247-700-11	CARBON	100	5%	1/4W
R413	1-260-661-11	CARBON	6.8	5%	1/4W
R414	1-247-138-00	CARBON	2K	5%	1/4W
R415	1-247-700-11	CARBON	100	5%	1/4W (AEP, UK)
R415	1-249-542-11	CARBON	390	5%	1/4W (G)
R416	1-246-545-00	CARBON	1.0M	5%	1/4W
R417	1-249-844-11	CARBON	56K	1%	1/2W
R418	1-249-818-11	CARBON	4.7K	1%	1/2W
R419	1-247-713-11	CARBON	1K	5%	1/4W
R420	1-249-421-11	CARBON	2.2K	5%	1/4W (G)
R421	1-249-421-11	CARBON	2.2K	5%	1/4W (G)
R422	1-247-714-11	CARBON	1.2K	5%	1/4W
R423	1-247-714-11	CARBON	1.2K	5%	1/4W
R424	1-247-714-11	CARBON	1.2K	5%	1/4W
R425	1-247-714-11	CARBON	1.2K	5%	1/4W
R426	1-247-714-11	CARBON	1.2K	5%	1/4W
R427	1-247-714-11	CARBON	1.2K	5%	1/4W
R428	1-247-714-11	CARBON	1.2K	5%	1/4W
R429	1-247-714-11	CARBON	1.2K	5%	1/4W
R430	1-247-249-00	CARBON	2.4K	5%	1/2W
R431	1-247-249-00	CARBON	2.4K	5%	1/2W
		< RELAY >			
RY502	1-515-727-11	RELAY			
RY503	1-515-501-00	RELAY			
RY504	1-515-501-00	RELAY			
		< SWITCH >			
S101	1-571-115-11	SWITCH, SLIDE (INPUT SELECTOR)			
S102	1-571-115-11	SWITCH, SLIDE (REC OUT SELECTOR)			
S401	1-571-111-11	SWITCH, PUSH (1 KEY) (CARTRIDGE)			
S601	⚠ 1-554-920-11	SWITCH, PUSH (AC POWER) (1 KEY) (POWER)			
		< CONNECTOR >			
SE1	1-564-320-00	PIN, CONNECTOR 2P			
SE2	1-564-320-00	PIN, CONNECTOR 2P			

Ref. No.	Part No.	Description			Remark
		< TERMINAL >			
TM301	1-537-235-11	TERMINAL BOARD (SP) (SPEAKER) (AE1, UK)			
TM301	1-537-227-11	TERMINAL BOARD (SP) (SPEAKER) (AE2)			
TM301	1-537-228-11	TERMINAL BOARD (SP) (SPEAKER) (G)			
		< CONNECTOR >			
VH9	* 1-564-321-00	PIN, CONNECTOR 2P			
VH10	* 1-564-321-21	PIN, CONNECTOR 2P			
VH12	* 1-564-241-00	PIN, CONNECTOR 4P			
**********					
	* A-4345-367-A	MAIN BOARD, COMPLETE (AE1, UK)			
	* A-4345-368-A	MAIN BOARD, COMPLETE (AE2)			
	* A-4345-666-A	MAIN BOARD, COMPLETE (G)			
		**********			
	* A-4345-379-A	TONE BOARD, COMPLETE			
		**********			
	* 1-639-360-11	VR BOARD			
		********			
	* 1-639-361-11	H.P BOARD			
		*********			
	* 1-639-362-11	TONE (J) BOARD			
		**********			
	* 1-639-363-11	MUT BOARD			
		*********			
	* 1-639-364-11	MUT LED BOARD			
		**********			
	* 1-639-365-11	POWER LED BOARD			
		**********			
	* 1-639-382-11	VR J BOARD			
		**********			
	* 4-942-408-01	SPACER (DIA. 30)			
		< CAPACITOR >			
C201	1-106-363-00	MYLAR	6800PF	5%	200V
C202	1-130-489-00	MYLAR	0.033uF	5%	50V
C203	1-130-491-00	MYLAR	0.047uF	5%	50V
C204	1-136-171-00	FILM	0.33uF	5%	50V
C206	1-136-172-00	FILM	0.39uF	5%	50V
C312	1-126-051-11	ELECT	47uF	20%	50V
C313	1-107-159-00	MICA	33PF	5%	500V
C314	1-107-159-00	MICA	33PF	5%	500V
C315	1-130-487-00	MYLAR (AE1, G, UK)	0.022uF	5%	50V
C315	1-130-491-00	MYLAR (AE2)	0.047uF	5%	50V
C316	1-130-491-00	MYLAR (AE2)	0.047uF	5%	50V
C322	1-162-282-31	CERAMIC (G)	100PF	10%	50V

Note: The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

MAIN **TONE** **VR** **H. P** **TONE (J)** **MUT** **MUT LED** **POWER LED** **VR J**

Ref. No.	Part No.	Description				Remark
C501	1-125-695-11	ELECT	12000uF	20%	63V	
C502	1-125-695-11	ELECT	12000uF	20%	63V	
C503	1-125-694-11	ELECT	5600uF	20%	63V	
C504	1-125-694-11	ELECT	5600uF	20%	63V	
C508	1-136-880-11	FILM	2.2uF	10%	160V	
C509	1-126-069-11	ELECT	1uF	20%	100V	
C510	1-126-066-11	ELECT	470uF	20%	63V	
C511	1-126-062-11	ELECT	47uF	20%	63V	
C512	1-126-219-11	ELECT	3.3uF	20%	63V	
C513	1-126-163-11	ELECT	4.7uF	20%	50V	
C517	1-126-023-11	ELECT	100uF	20%	25V	
C518	1-130-487-00	MYLAR	0.022uF	5%	50V	
C519	1-126-023-11	ELECT	100uF	20%	25V	
C520	1-130-471-00	MYLAR	0.001uF	5%	50V	
C521	1-130-483-00	MYLAR	0.01uF	5%	50V	
C522	1-130-483-00	MYLAR	0.01uF	5%	50V	
		< CONNECTOR >				
CP1	* 1-568-202-11	PIN, CONNECTOR (PC BOARD) 10P				
CP2	* 1-560-552-00	PIN, CONNECTOR 5P				
CP4	* 1-568-202-11	PIN, CONNECTOR (PC BOARD) 10P				
CP5	1-568-577-11	PIN, CONNECTOR (PC BOARD) 3P				
CP11	* 1-560-531-00	PIN, CONNECTOR 5P				
CS1	* 1-562-334-00	SOCKET, CONNECTOR 10P				
CS2	* 1-562-334-00	SOCKET, CONNECTOR 10P				
CS4	* 1-562-334-00	SOCKET, CONNECTOR 10P				
CS6	* 1-563-106-11	CONNECTOR (SOCKET) 10P				
CS7	* 1-565-835-11	SOCKET, CONNECTOR 3P				
		< DIODE >				
D307	8-719-912-20	DIODE 1SS120				
D308	8-719-912-20	DIODE 1SS120				
D309	8-719-912-20	DIODE 1SS120				
D357	8-719-912-20	DIODE 1SS120				
D358	8-719-912-20	DIODE 1SS120				
D359	8-719-912-20	DIODE 1SS120				
D501	8-719-230-02	DIODE 30DF2				
D502	8-719-230-02	DIODE 30DF2				
D503	8-719-230-02	DIODE 30DF2				
D504	8-719-230-02	DIODE 30DF2				
D505	8-719-200-82	DIODE 11ES2				
D506	8-719-200-82	DIODE 11ES2				
D507	8-719-200-82	DIODE 11ES2				
D508	8-719-200-82	DIODE 11ES2				
D509	8-719-200-82	DIODE 11ES2				
D510	8-719-200-82	DIODE 11ES2				
D511	8-719-200-82	DIODE 11ES2				
D512	8-719-313-40	DIODE SEL1516W				
D513	8-719-912-20	DIODE 1SS120				

Ref. No.	Part No.	Description				Remark
D514	8-719-912-20	DIODE 1SS120				
D517	8-719-912-20	DIODE 1SS120				
D518	8-719-301-49	DIODE SEL2810A				
D519	8-719-301-49	DIODE SEL2810A				
D520	8-719-912-20	DIODE 1SS120				
		< CONNECTOR >				
DR4	* 1-564-339-61	PIN, CONNECTOR 5P				
DR5	* 1-564-337-00	PIN, CONNECTOR 3P				
EH1	* 1-564-506-11	PLUG, CONNECTOR 3P				
		< IC >				
IC501	8-759-111-68	IC uPC1237HA				
		< JACK >				
J301	1-507-796-71	JACK (HEADPHONES)				
		< TRANSISTOR >				
Q309	8-729-203-45	TRANSISTOR 2SC3423-0				
Q310	8-729-107-53	TRANSISTOR 2SC2275A-QP				
Q311	8-729-141-10	TRANSISTOR 2SA985A-QP				
Q312	8-729-322-28	TRANSISTOR 2SC2922M-0Y				
Q313	8-729-322-29	TRANSISTOR 2SA1216M-0Y				
Q314	8-729-140-82	TRANSISTOR 2SA988-PAFAEA				
Q359	8-729-203-45	TRANSISTOR 2SC3423-0				
Q360	8-729-107-53	TRANSISTOR 2SC2275A-QP				
Q361	8-729-141-10	TRANSISTOR 2SA985A-QP				
Q362	8-729-322-28	TRANSISTOR 2SC2922M-0Y				
Q363	8-729-322-29	TRANSISTOR 2SA1216M-0Y				
Q364	8-729-140-82	TRANSISTOR 2SA988-PAFAEA				
Q501	8-729-194-57	TRANSISTOR 2SC945-P				
Q502	8-729-141-03	TRANSISTOR 2SA733-QP				
Q503	8-729-141-03	TRANSISTOR 2SA733-QP				
Q504	8-729-140-96	TRANSISTOR 2SD774-34				
Q505	8-729-620-05	TRANSISTOR 2SC2603-EF				
Q506	8-729-620-05	TRANSISTOR 2SC2603-EF				
		< RESISTOR >				
R111	1-259-580-11	CARBON	11K	5%	1/2W	
R201	1-247-721-11	CARBON	4.7K	5%	1/4W	
R202	1-247-712-11	CARBON	820	5%	1/4W	
R203	1-246-545-00	CARBON	1.0M	5%	1/4W	
R204	1-247-716-11	CARBON	1.8K	5%	1/4W	
R205	1-259-502-11	CARBON	4.7M	5%	1/4W	
R206	1-259-502-11	CARBON	4.7M	5%	1/4W	
R207	1-247-128-00	CARBON	750	5%	1/4W	
R208	1-249-577-11	CARBON	11K	5%	1/4W	
R209	1-247-138-00	CARBON	2K	5%	1/4W	

MAIN **TONE** **VR** **H. P** **TONE (J)** **MUT** **MUT LED** **POWER LED** **VR J**

Ref. No.	Part No.	Description				Remark
R210	1-247-152-00	CARBON	8.2K	5%	1/4W	
R211	1-259-580-11	CARBON	11K	5%	1/2W	
R314	⚠ 1-247-713-11	CARBON	1K	5%	1/4W	F
R315	1-247-707-11	CARBON	390	5%	1/4W	
R316	⚠ 1-212-990-00	FUSIBLE	220	5%	1/2W	F
R317	⚠ 1-212-950-00	FUSIBLE	4.7	5%	1/2W	F
R318	⚠ 1-212-950-00	FUSIBLE	4.7	5%	1/2W	F
R319	1-217-151-00	RES, METAL PLATE	0.22			
R320	1-217-151-00	RES, METAL PLATE	0.22			
R321	⚠ 1-247-721-11	CARBON	4.7K	5%	1/4W	F
R322	1-249-460-11	CARBON	15K	5%	1/4W	
R323	⚠ 1-212-962-00	FUSIBLE	15	5%	1/2W	F
R324	⚠ 1-212-962-00	FUSIBLE	15	5%	1/2W	F
R325	1-247-891-00	CARBON	330K	5%	1/4W	
R329	1-247-747-11	CARBON	470	5%	1/2W	
R501	⚠ 1-212-849-00	FUSIBLE	4.7	5%	1/4W	F
R502	1-247-721-11	CARBON	4.7K	5%	1/4W	
R503	1-247-251-00	CARBON	3K	5%	1/2W	
R504	1-247-251-00	CARBON	3K	5%	1/2W	
R505	1-247-251-00	CARBON	3K	5%	1/2W	
R506	1-247-251-00	CARBON	3K	5%	1/2W	
R507	1-247-251-00	CARBON	3K	5%	1/2W	
R508	1-247-251-00	CARBON	3K	5%	1/2W	
R509	1-247-251-00	CARBON	3K	5%	1/2W	
R510	1-247-725-11	CARBON	10K	5%	1/4W	
R511	1-249-462-11	CARBON	22K	5%	1/4W	
R512	1-249-465-11	CARBON	47K	5%	1/4W	
R513	1-249-465-11	CARBON	47K	5%	1/4W	
R515	1-247-706-11	CARBON	330	5%	1/4W	
R516	1-247-706-11	CARBON	330	5%	1/4W	
R517	1-247-249-00	CARBON	2.4K	5%	1/2W	
R518	1-247-249-00	CARBON	2.4K	5%	1/2W	
R519	1-247-092-00	CARBON	24	5%	1/4W	
R520	1-247-721-11	CARBON	4.7K	5%	1/4W	
R521	1-249-461-11	CARBON	18K	5%	1/4W	
R522	1-247-881-00	CARBON	120K	5%	1/4W	
R523	1-247-725-11	CARBON	10K	5%	1/4W	
R524	1-247-887-00	CARBON	220K	5%	1/4W	
R525	1-247-757-11	CARBON	2.7K	5%	1/2W	
R526	1-247-757-11	CARBON	2.7K	5%	1/2W	
R527	1-249-462-11	CARBON	22K	5%	1/4W	
R529	1-247-738-11	CARBON	82	5%	1/2W	
R530	1-247-717-11	CARBON	2.2K	5%	1/4W	
R531	1-247-251-00	CARBON	3K	5%	1/2W	
R540	1-247-721-11	CARBON	4.7K	5%	1/4W	
R541	1-247-721-11	CARBON	4.7K	5%	1/4W	
R542	1-247-758-11	CARBON	3.3K	5%	1/2W	(AE1, G, UK)
R542	1-247-251-00	CARBON	3K	5%	1/2W	(AE2)
R543	1-247-758-11	CARBON	3.3K	5%	1/2W	(AE1, G, UK)
R543	1-247-251-00	CARBON	3K	5%	1/2W	(AE2)
		< VARIABLE RESISTOR >				
RT301	1-237-455-11	RES, ADJ, CARBON 500				
RT351	1-237-455-11	RES, ADJ, CARBON 500				
RV201	1-241-517-11	RES, VAR, CARBON 250K/250K (BALANCE)				
RV202	1-241-518-11	RES, VAR, CARBON 25K/100K (TREBLE)				
RV203	1-241-519-11	RES, VAR, CARBON 25K/250K (BASS)				
RV204	1-241-515-11	RES, VAR, CARBON 60K/60K (ATTENUATOR)				
		< RELAY >				
RY501	1-515-727-11	RELAY				
RY505	1-515-787-11	RELAY				
		< SWITCH >				
S201	1-572-738-11	SWITCH, PUSH (3 KEY) (SUBSONIC)				
S202	1-572-741-11	SWITCH, PUSH (1 KEY) (SOURCE DIRECT)				
S203	1-572-738-11	SWITCH, PUSH (3 KEY) (MODE)				
S204	1-572-738-11	SWITCH, PUSH (3 KEY) (DIRECT INPUT)				
S205	1-572-740-11	SWITCH, PUSH (1 KEY) (MUTING -20dB)				
S206	1-572-739-11	SWITCH, PUSH (2 KEY) (SPEAKER A)				
S207	1-572-739-11	SWITCH, PUSH (2 KEY) (SPEAKER B)				
S208	1-572-143-11	SWITCH, SLIDE (SOURCE DIRECT)				
		< CONNECTOR >				
VH1	* 1-564-241-00	PIN, CONNECTOR 4P				
VH2	1-564-320-00	PIN, CONNECTOR 2P				
VH5	* 1-564-241-00	PIN, CONNECTOR 4P				
VH6	* 1-564-241-00	PIN, CONNECTOR 4P				

****

MISCELLANEOUS

****

70	1-572-742-11	SWITCH, ROTARY
71	1-572-743-11	SWITCH, ROTARY
114	⚠ 1-559-272-21	CORD, POWER (UK)
120	⚠ 1-575-953-11	CORD, POWER (AEP, G)
121	1-535-706-11	PLUG, JUMPER
T901	⚠ 1-450-498-11	TRANSFORMER, POWER (AE1, G)
T901	⚠ 1-450-502-11	TRANSFORMER, POWER (AE2)
T901	⚠ 1-450-541-11	TRANSFORMER, POWER (UK)

****

Note: The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remark
		ACCESSORY & PACKING MATERIAL	
		**********	
	3-753-600-11	MANUAL, INSTRUCTION (AE1, UK) (ENGLISH, FRENCH, SPANISH, PORTUGUESE)	
	3-753-600-41	MANUAL, INSTRUCTION (AEP, G) (GERMAN, DUTCH, SWEDISH, ITALIAN)	
*	4-929-219-01	CUSHION	
*	4-945-287-01	INDIVIDUAL CARTON	

****

HARDWARE LIST

#1	7-685-234-19	SCREW +KTP 2.6X8 TYPE2NON-SLIT
#2	7-682-547-09	SCREW +BVTT 3X6 (S)
#3	7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S
#4	7-685-650-79	SCREW +BVTP 3X16 TYPE2 SLIT
#5	7-682-548-09	SCREW (3X8)
#6	7-682-565-09	SCREW +B 4X16 (G)
#6	7-682-566-09	SCREW +B 4X20 (AEP, UK)
#7	7-684-024-04	N 4, TYPE 2
#8	7-685-648-79	SCREW +BVTP 3X12 TYPE2 IT-3
#9	7-685-876-09	SCREW +BVTT 3X16 (S)
#10	7-621-849-00	SCREW, TAPPING (G)

9-956-547-11

Sony Corporation
Audio Group

English
91F0450-1
Printed in Japan
© 1991. 6

Published by Customer Relations and Service Group